

# AtlasIoTCore Database guide

# AtlasIoTCore Database

To configure the database for the AtlasIoTCore, click or touch the cloud icon, located at top right corner the home screen.



At the bottom of the MQTT Settings you'll see text field labeled **Database Name**. This field shows the filename and location of the database.

**./IoTData.db** - This is the default filename and location of the database.

In the database is a table named SensorData, which have the following fields:

id INTEGER PRIMARY KEY	= displays the ID number of the record
RecordDateUTC text	= displays time and date of readings: yyyy-mm-dd-00:00:00
sensorType text	= displays the type of sensor(s) you are using
moduleName text	= displays the name you have given to the sensor(s)
lastReading text	= displays the last reading from the sensor(s)
sensorData text	= All JSON information