

How to install AtlasIoTCore Image file

AtlasIoTCore image file

Requirements

- Raspberry Pi 3b or later
- 16 Gb Micro SD card

**The AtlasIoTCore will work on a Raspberry Pi 3b or later.
The compressed file is 1.57GB and extracts to 4.66GB.**

After you download and extract the compressed file from our website, you will need to mount the *.img file onto an SD card. To do so, you will need to use:

Windows - [Win32 Disk imager](#)

Mac - [Raspberry Pi Imager](#)*

**Atlas Scientific has not tested this software, this is what is recommended by the Raspberry Pi community.*



We recommend using class 10 SD / UHS-I or higher speed Micro SD card, with a minimum of 16GB.

For more information on how to mount the *.img file to the SD card

Windows - [click here](#)

Mac - [click here](#)

You can now insert the SD card into the Raspberry Pi and power it up.