AtlasScientific™
Environmental Robotics

How to view RGB output
on your computer
Revised 2/28/19

VIEW_RGB_DATA — □ ×

R: 201
G: 164
B: 167

LED: 50   Gamma: 1.00
+ −   + −

RESET   Calibrate
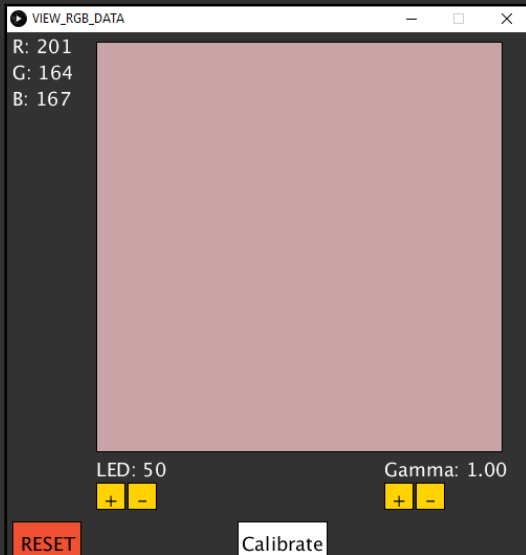
In order to get this code working correctly, you will need to install Processing.

Click to download Processing

NC

5v
3v RX
GND
RX TX
TX
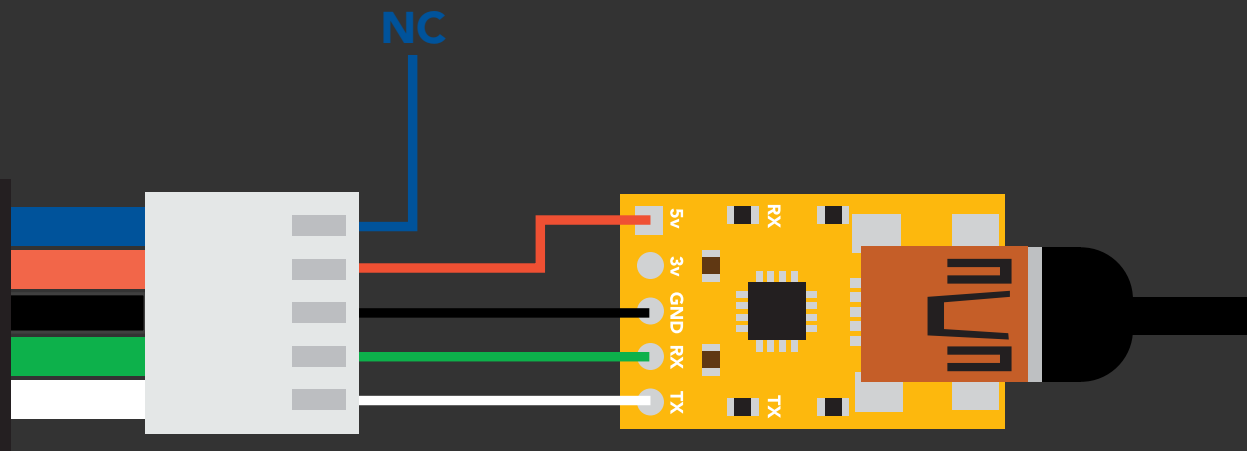
Click here to download the *.pde file