
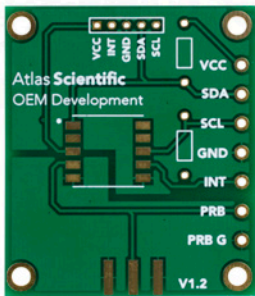


OEM simple development board

This simple breakout board is designed to help the embedded systems engineer quickly develop a system using Atlas Scientific™ OEM class devices.

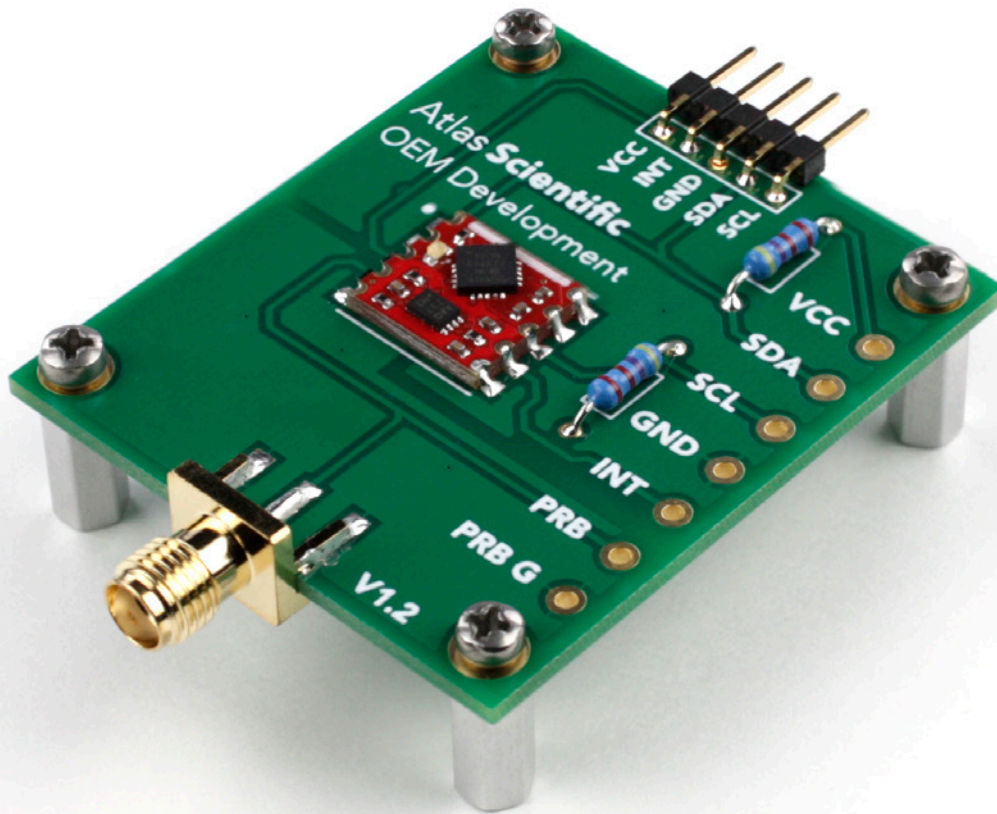

This breakout board comes with


- (2) 4.7K resistors (used for I2C pull ups)
- (1) Female SMA connector
- (1) 5 pin jumper cable
- (1) 5 pin male header
- (1) Right angle 5 pin male header
- (4) Spacers & screws



***This board does not come with components attached.
This board does not come with an OEM Class device.***

OEM simple development board

Solder flux residue left on the board can interfere with readings, making it difficult or impossible to achieve accurate readings. **Don't be a flux head, remove all solder flux residue from these spots.**

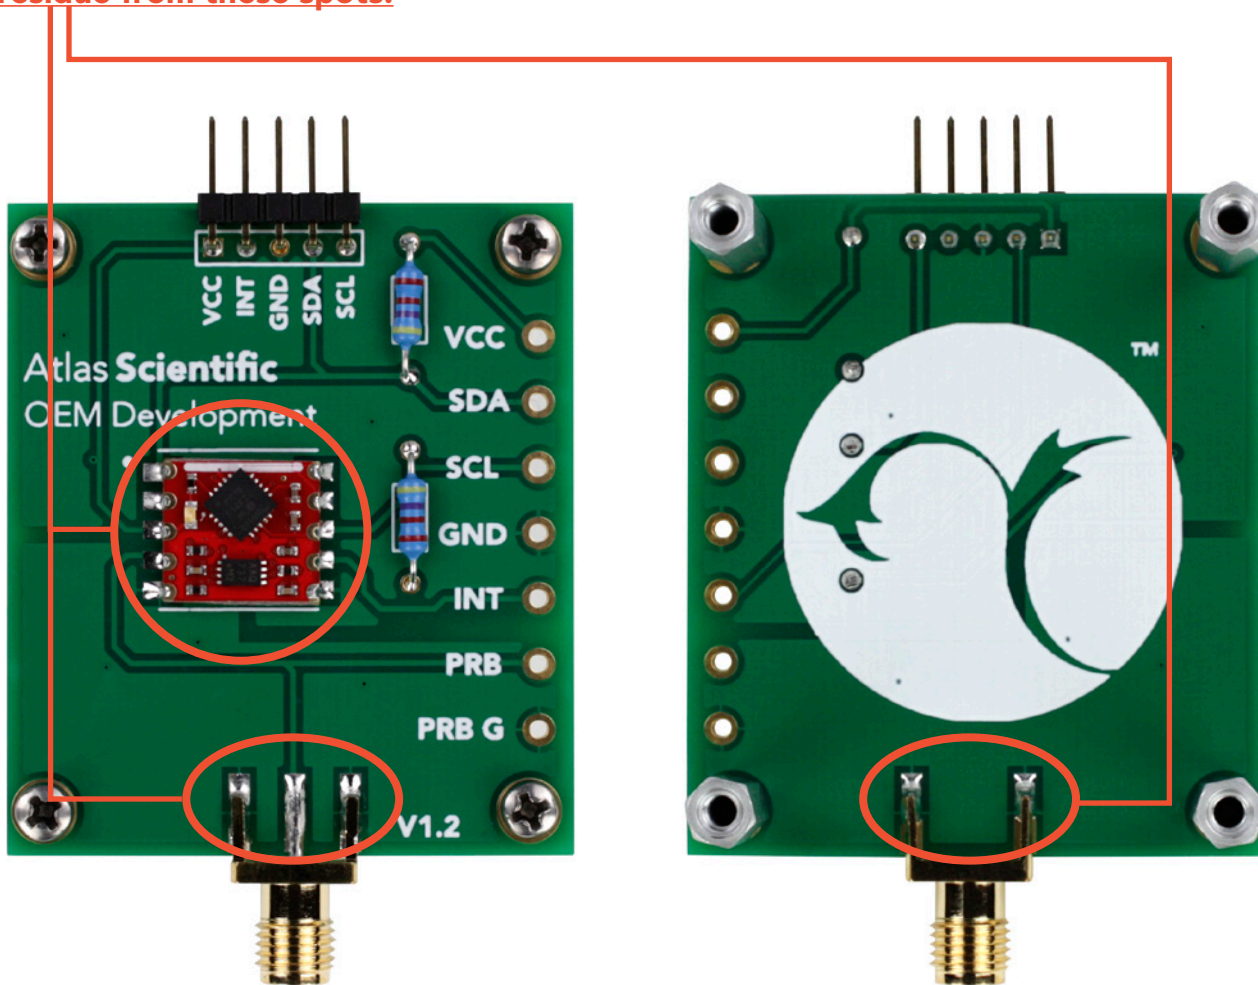

A great way to remove solder flux residue, is to soak the board in alcohol for 20 minutes. After they have finished soaking, rinse the board off with D.I. water.